
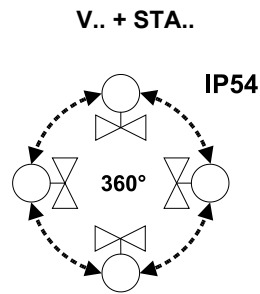


de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-handleiding
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
ru Инструкция по установке
zh 安裝指導


Ventile PN16
Valves PN16
Vannes PN16
Ventiler PN16
Afsluiters PN16
Valvole PN16
Venttiilit PN16
Válvulas PN16
Ventiler PN16
Zawory PN16
Ventily PN16
Szelepek PN16
Βάνες PN16
Клапаны PN16
閥門 PN16

VVI46..
VXI46..

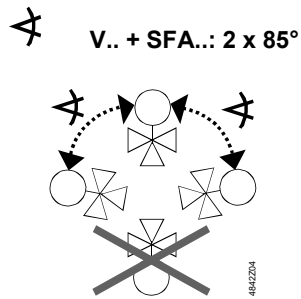


1a


VVI46..

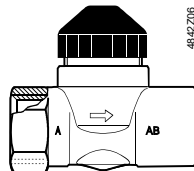

2a

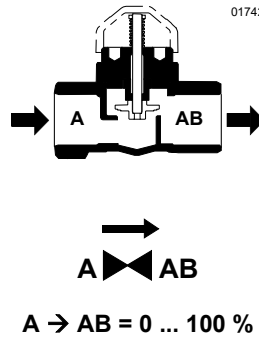


3a

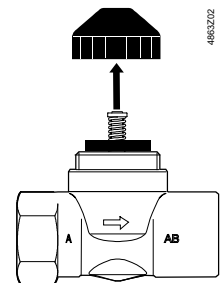


1b


VXI46..

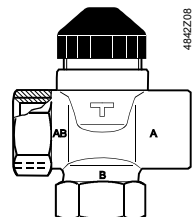

2b

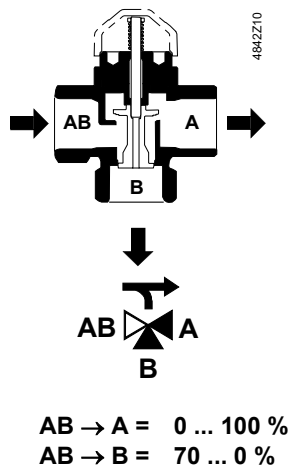


3b

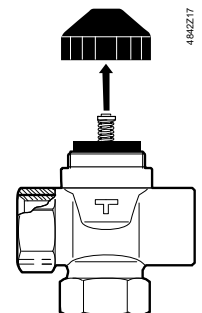


4

V..I46 + SFA..

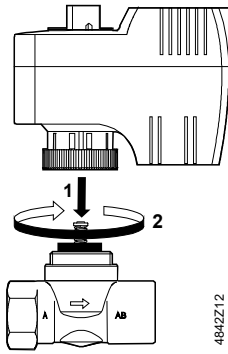


4842Z12

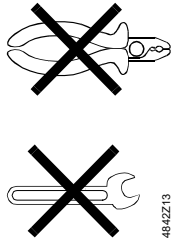


4842Z13

V..I46 + STA..

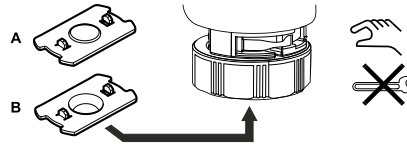


VVI46.., VXI46.. 10.2 ⇒ **A** ✓
VXI46.25.T.. 10.8 ⇒ **no** X


📖 A6V12984110

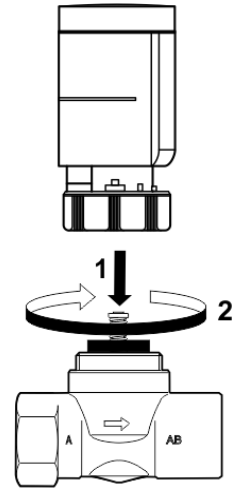


VXI46.. + SFA..

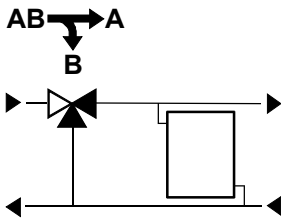

MXE..

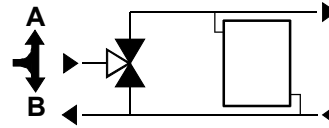


VVI46..

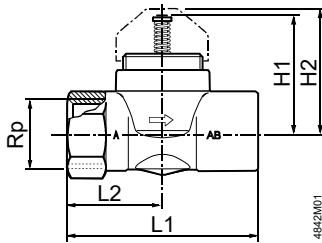

4842M01

VXI46..

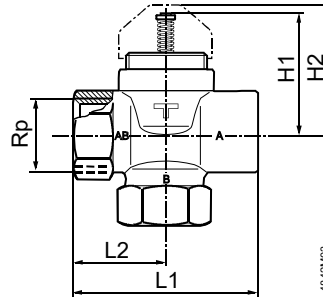

4842M03

	DN	Rp	H1	H2	L1	L2
		[Inch]	[mm]	[mm]	[mm]	[mm]
VVI46.15	15	Rp ½	45,2	48	60	30
VVI46.20	20	Rp ¾	45,2	48	65	32,5
VVI46.25	25	Rp 1	45,2	48	84	42

	DN	Rp	H1	H2	L1	L2
		[Inch]	[mm]	[mm]	[mm]	[mm]
VXI46.15	15	Rp ½	45,2	48	60	30
VXI46.20	20	Rp ¾	45,2	48	65	32,5
VXI46.25	25	Rp 1	45,2	48	84	42
VXI46.25T	25	Rp 1	45,2	48	84	42

Issued by:
Siemens Switzerland Ltd
Smart Infrastructure
Global Headquarters
Theilerstrasse 1a
CH-6300 Zug
Switzerland
Tel. +41 58 724-2424

www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd, 2009

Technical specifications and availability subject to change without notice.